

### STEP 1: PLUG IN BATTERY

See label on flashlight for instructions.

### POWER/MODE BUTTON

- Press to turn ON
- Press to change mode:
  1. Spotlight
  2. Flood Light
  3. Red Flood Light
  4. Flashing Red Flood Light
  5. Flashing Flood Light
  6. Off
- After 5 seconds of no mode change, next button press is OFF

### CHANGE BRIGHTNESS

- Press & HOLD to increase/decrease brightness
- Light blinks to indicate minimum or maximum brightness level.

### MODE RECALL

 
FLi-PRO Telescoping Light remembers the last used light mode. After 5 seconds of no mode change, next Power Button press is OFF. When pressed again the light will recall last used light mode.

### WIRELESS REMOTE


- Wireless remote works up to 15'(4.5m) from flashlight head
- Independently control light modes and brightness
- When not in use magnetically attach remote to base of tripod



### FLi-PRO FLASHLIGHT

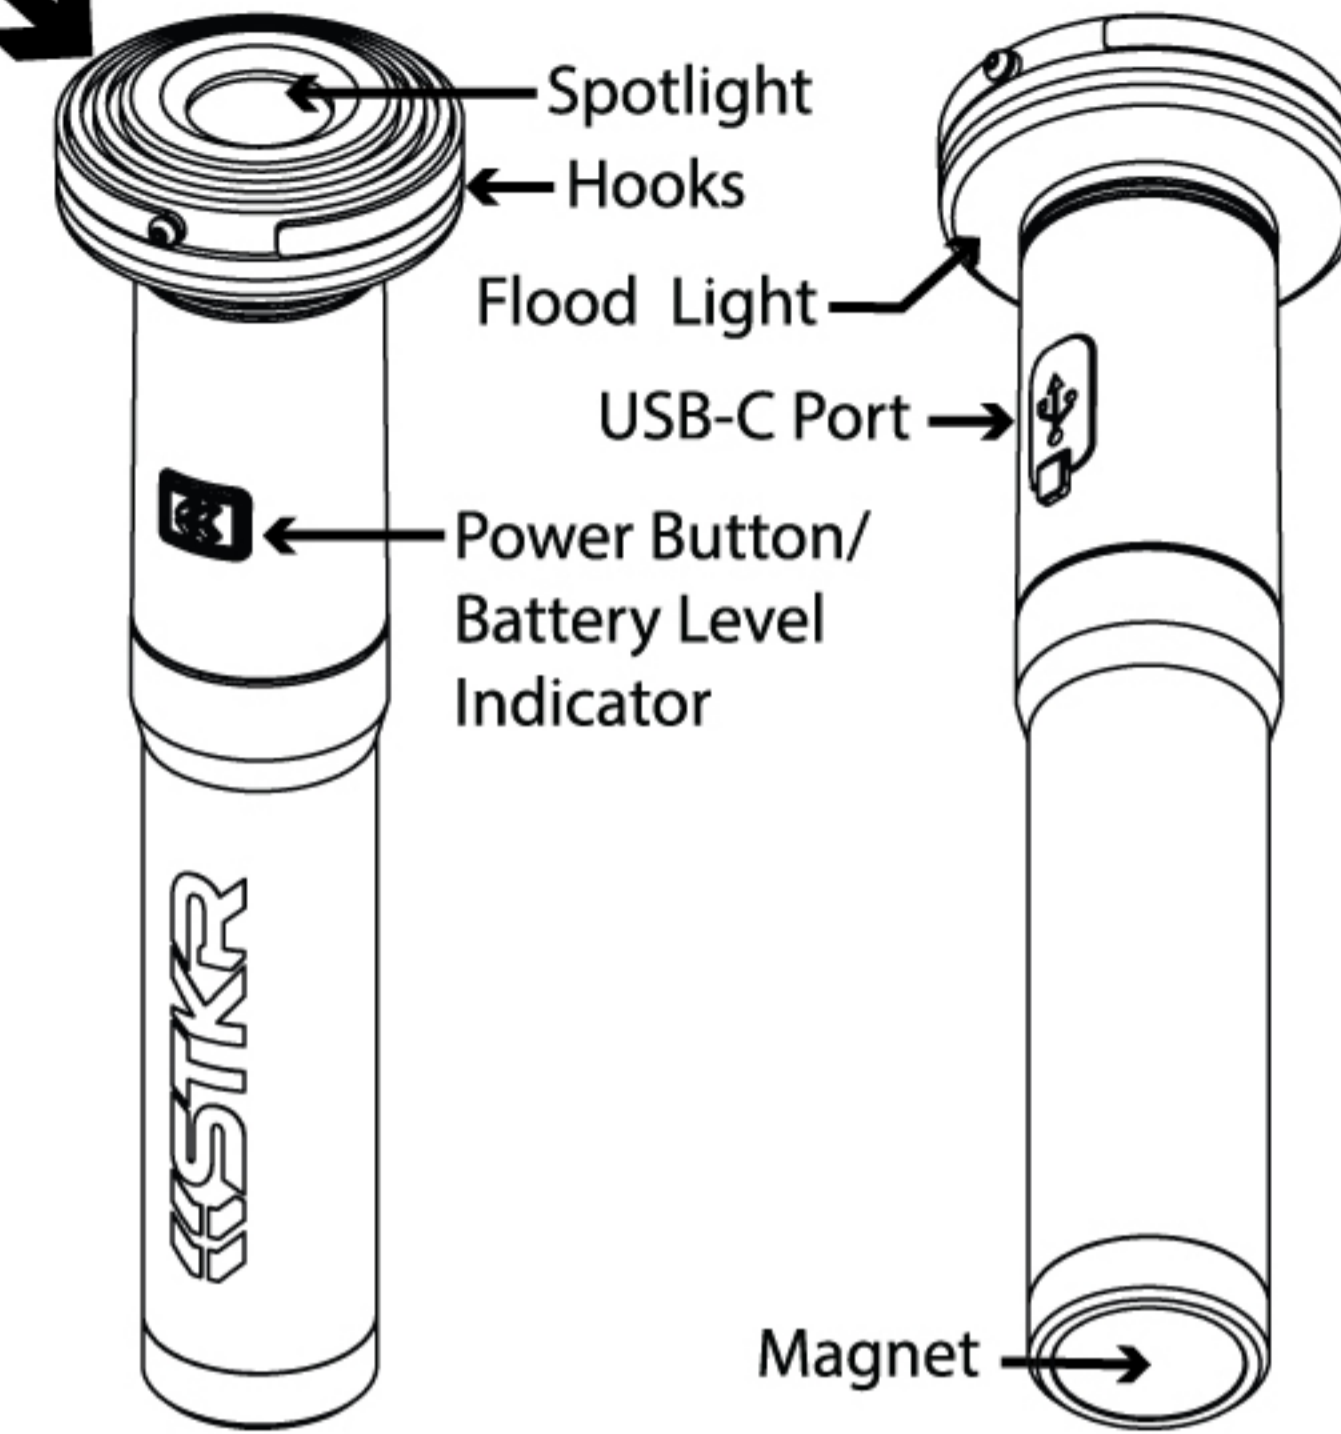


### TELESCOPING ROD

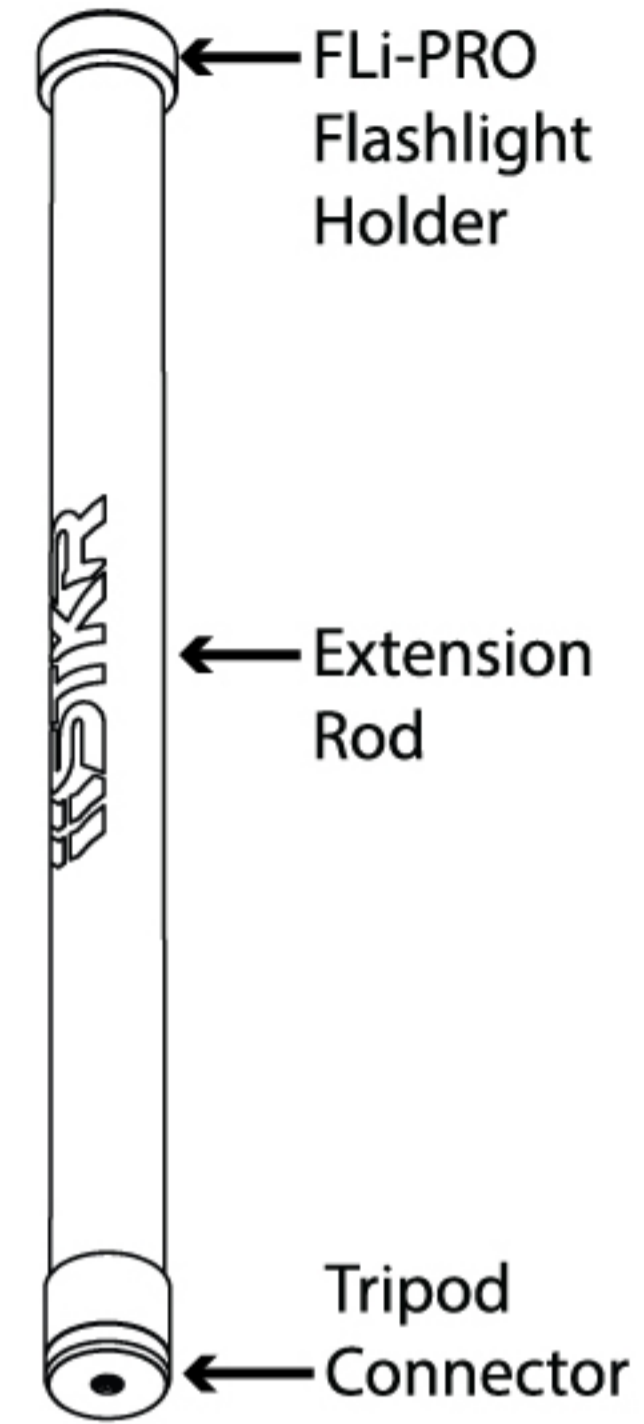 


### WIRELESS REMOTE

 Finger placement (Wireless Remote Orientation)

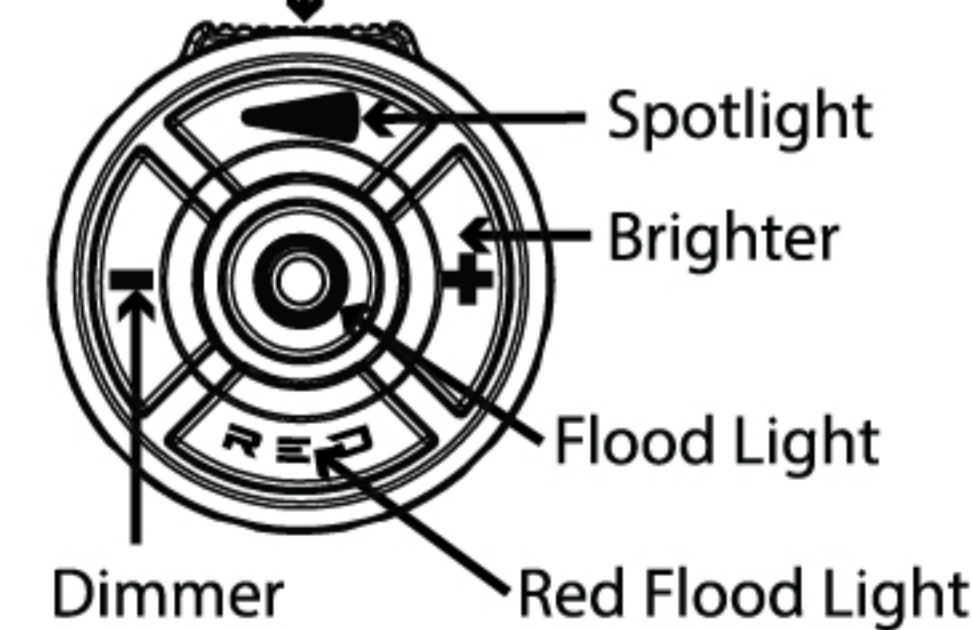

### TRIPOD

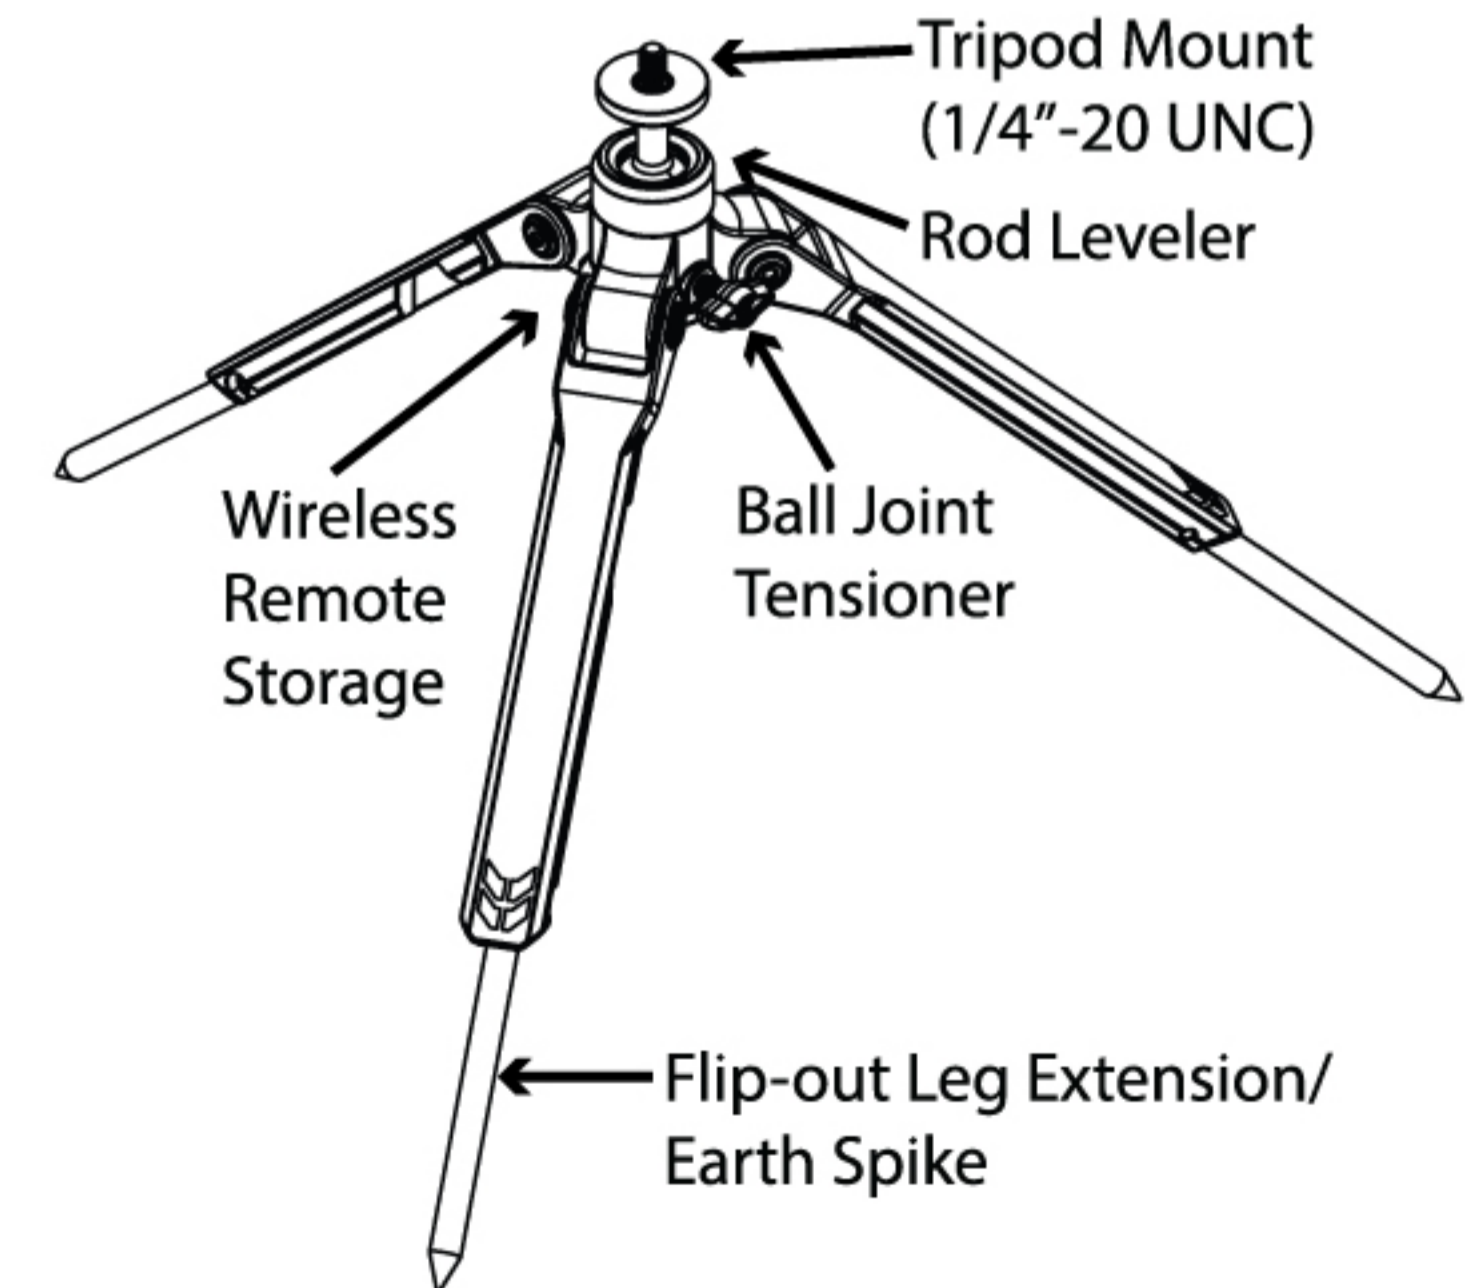 

Extendable from 2' 3" to 8' (2.4m)






**BATTERY LEVEL INDICATOR**

 Power button battery level indicator LEDs turn on for 5 seconds when light is turned on or off.

100-60%	Green
59-25%	Yellow
24-10%	Red
9-0%	Flashing Red

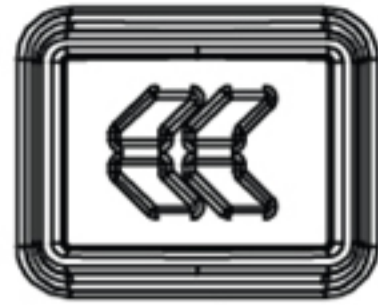

\* % battery life listed above are approximate and may fluctuate.

**CHARGING**

1) Remove USB-C port cover 2) Plug the USB-C cable into the USB-C port 3) plug the other end of the cable into a USB wall charger\*, USB car charger\*, or any other USB charging device\* (e.g. computer). \*Charger output of up to 3A is recommended. Charger output should NOT exceed 3.6A to prevent battery damage.

-- Battery Level Indicator lights blink while charging then solid glow when fully charged.

\*\*Please recharge a stored unit every four months to maintain optimum performance of the lithium-ion batteries and maximize charging levels. Battery excl. from warranty.

**REPLACEABLE BATTERY**

Over time battery degradation may occur. To replace a worn out cell follow these steps:

1) Unscrew handle 2) Carefully unplug battery 3) Replace 21700 Lithium-ion rechargeable battery with JST connector (to match original battery capacity use 4000mAh, available on our website.) 4) Plug battery connector into terminal 5) Screw handle back on.

**"WARNING: This product is powered by a lithium battery. Due to their small size, lithium batteries can easily be swallowed by children. Ingestion of such batteries has been known to cause death."**

**1. WARNING - KEEP BATTERIES OUT OF REACH OF CHILDREN**

2. Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the esophagus.

3. If you suspect your child has swallowed or inserted a button battery, immediately seek urgent medical assistance.

4. Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if compartment is not secure.

5. Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.

6. Tell others about the risk associated with button batteries and how to keep their children safe.

Warnings should be placed adjacent to the instruction for replacing batteries. Graphical symbols may be added to either add emphasis.

**FCC ID#: 2A85RFLIPRO**

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna. - Increase the separation between the equipment and the receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help..

**SPECIFICATIONS** Model # 12679 1 Year warranty**LIGHT**

1200 Total Max Lumens (Flood + spot)

Flood Light: 900 Lumens

Spotlight: 450 Lumens

**BATTERY**

MAIN: 21700 Rechargeable Lithium-ion Capacity: 4000mAh

REMOTE: CR2032

**OTHER**

Safe to use outside in rain. Weather Resistant to IP54

Total Weight: 1.9lb (0.86Kg) [battery incl.]

**PACKAGE CONTENTS**

[1] FLi-PRO Flashlight	[1] USB-A to USB-C Cable
[1] Telescoping Rod	[1] USB-C Charger
[1] Tripod	[1] Carrying Bag
[1] Wireless Remote	

**⚠ LED SAFETY WARNING**

This product contains high intensity LED devices. To prevent permanent eye damage, do not stare into the light beam at close range.

**⚠ HEAT WARNING - THIS ITEM GETS HOT!!!**

The head of the flashlight is an active heatsink and gets very hot at full power.

**USE WITH CAUTION TO AVOID BURNS OR FIRES!**

**KEEP OUT OF REACH OF CHILDREN!**

**⚡ LIGHTING STRIKE HAZARD WARNING**

DO NOT USE during a thunderstorm. Before a thunderstorm approaches ensure the FLi-PRO Telescoping Light is stored safely. If you are caught outside during a thunderstorm DO NOT STAND NEAR the FLi-PRO Telescoping Light. STAY A SAFE DISTANCE AWAY from the FLi-PRO Telescoping Light as it can act as a lightning rod. Use all lightning safety measures. Not following thunderstorm/lightning precautions can result in serious injury or death.

Store Magnetic  
Wireless Remote Here

