

10/06/08



FITTING INSTRUCTIONS FOR  
**MFK1850**  
**HEAT SHIELD FOR CHEVY GEN3/GEN4 V8**  
**TO**  
**NISSAN PATROL**


Thank you for purchasing a product manufactured by Marks 4WD Adaptors. The following instructions are intended as a guide.

1. While the engine is removed from the vehicle, reposition the fuel and brake lines so that they enter the engine bay on top of the chassis.



2. Secure the pipes using the original clamps. **Note:** shape of the clamps will need to be altered to secure the pipes on top of the chassis.



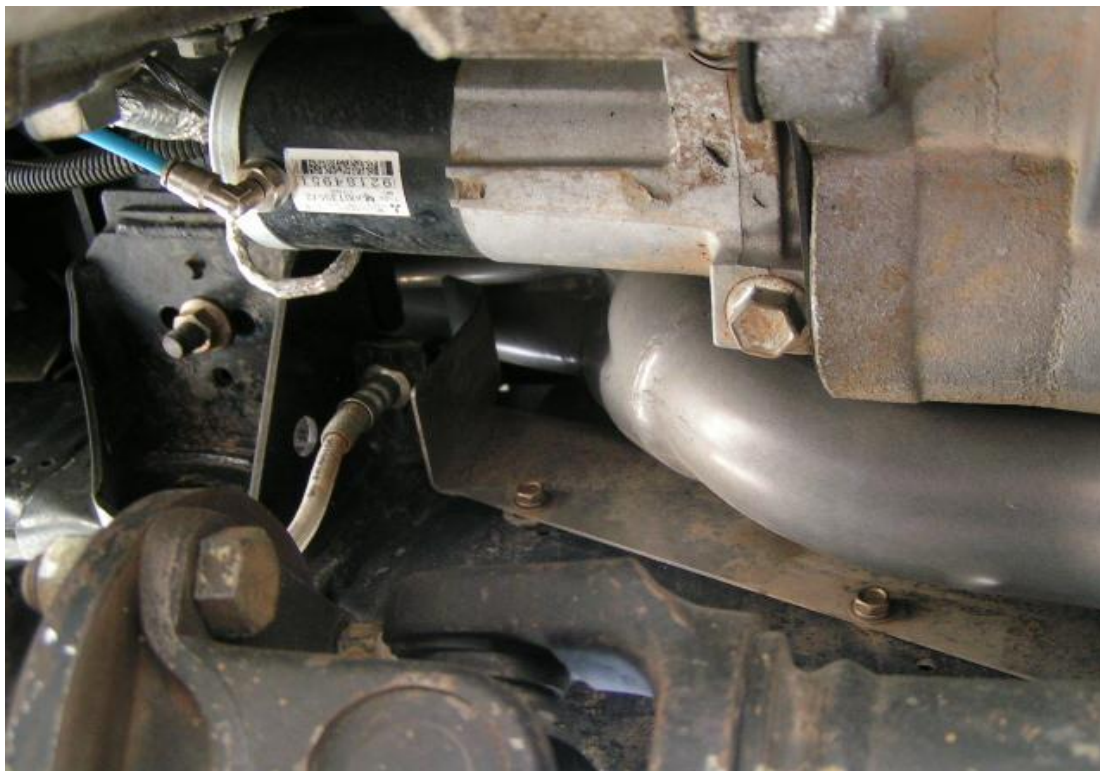





3. Drill and tap the M6 holes in the chassis and secure it using three of the M6 bolts previously removed from the vehicle. **Note:** The rear M6 bolt should be located directly above the 25mm diameter hole in the chassis. See the photos above.

The components supplied in the kit are designed for specific type conversions. Modifications to any components without the written consent from Marks 4WD Adaptors will void any possible warranty or return privileges. Should you have any further questions that are not covered in the instruction sheet, please contact our sales department for assistance.

***Proudly Manufactured by:***

**Marks 4WD Adaptors**

**385-393 Lower Dandenong Road, Dingley, Vic. 3172**

**Tel: (03) 9552 6555**

**E-Mail: [sales@marks4wd.com](mailto:sales@marks4wd.com)**

**Catalogue: <http://www.marks4wd.com/>**