



Installation Instructions for MFK268G3-11 Heavy Duty LS Flywheel Kit

Important Information

Please take care when installing this product as fitting it incorrectly could result in damage to your engine. You may require a workshop manual for your vehicle to verify further details.

Marks 4WD Adaptors do not and cannot take responsibility for knowing everything that may impact on your conversion. Before beginning any work, thoroughly work through your instructions, workshop manual and parts to make sure you completely understand all the factors that may impact your setup.

To suit:

- Nissan Patrol
- Other applications requiring a HD Flywheel




MFK268G3-11 Assembly Instructions

Step 1 – Fit the cover plate and spigot bearing to the engine.


Step 2 – The flywheel can now be fitted.

Using the supplied crank bolts torque to the specification and sequence below.

The bolts are torqued in two stages, the first stage is 50Nm followed by 100Nm

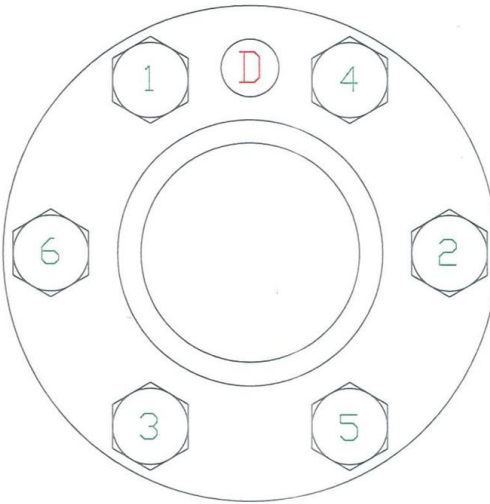

Step 3 – Finished product

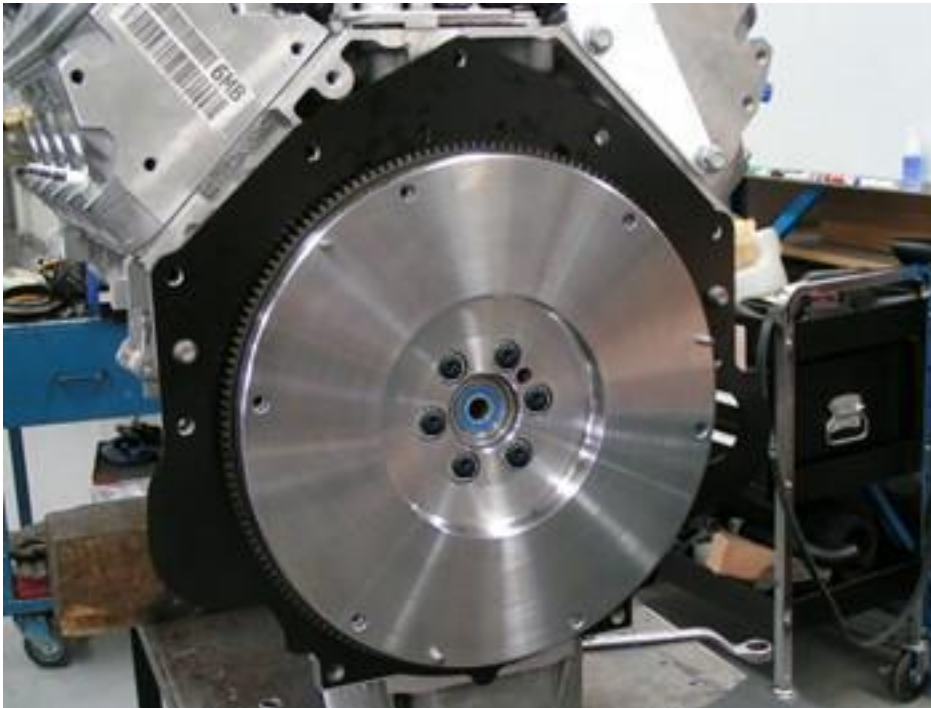

Terms and Conditions

Thank you for purchasing this product manufactured by Marks 4WD Adaptors. Components supplied in this kit are designed and machined for a specific conversion only as outlined in this guide. Modifications to or substitution for any of the components without the written consent of Marks 4WD Adaptors will void any possible warranty or return privileges.

The following instructions are intended as a guide and only for Marks 4WD Adaptors kits. If you do not fully understand the steps, modifications or changes required to complete the tasks, contact our sales department for more information. We recommend that you purchase a service manual pertaining to your vehicle and the engine/transmission you are fitting for specific torque values, wiring diagrams and other related information.

Contact Information

Web: www.marks4wd.com
Email: sales@marks4wd.com
Phone: + 61 3 9552 6555
Address: 385-393 Lower Dandenong Rd
Dingley Victoria 3172
Australia